




# Canon EOS 30 Grip Replacement

How to remove the grip.

Written By: Jackie

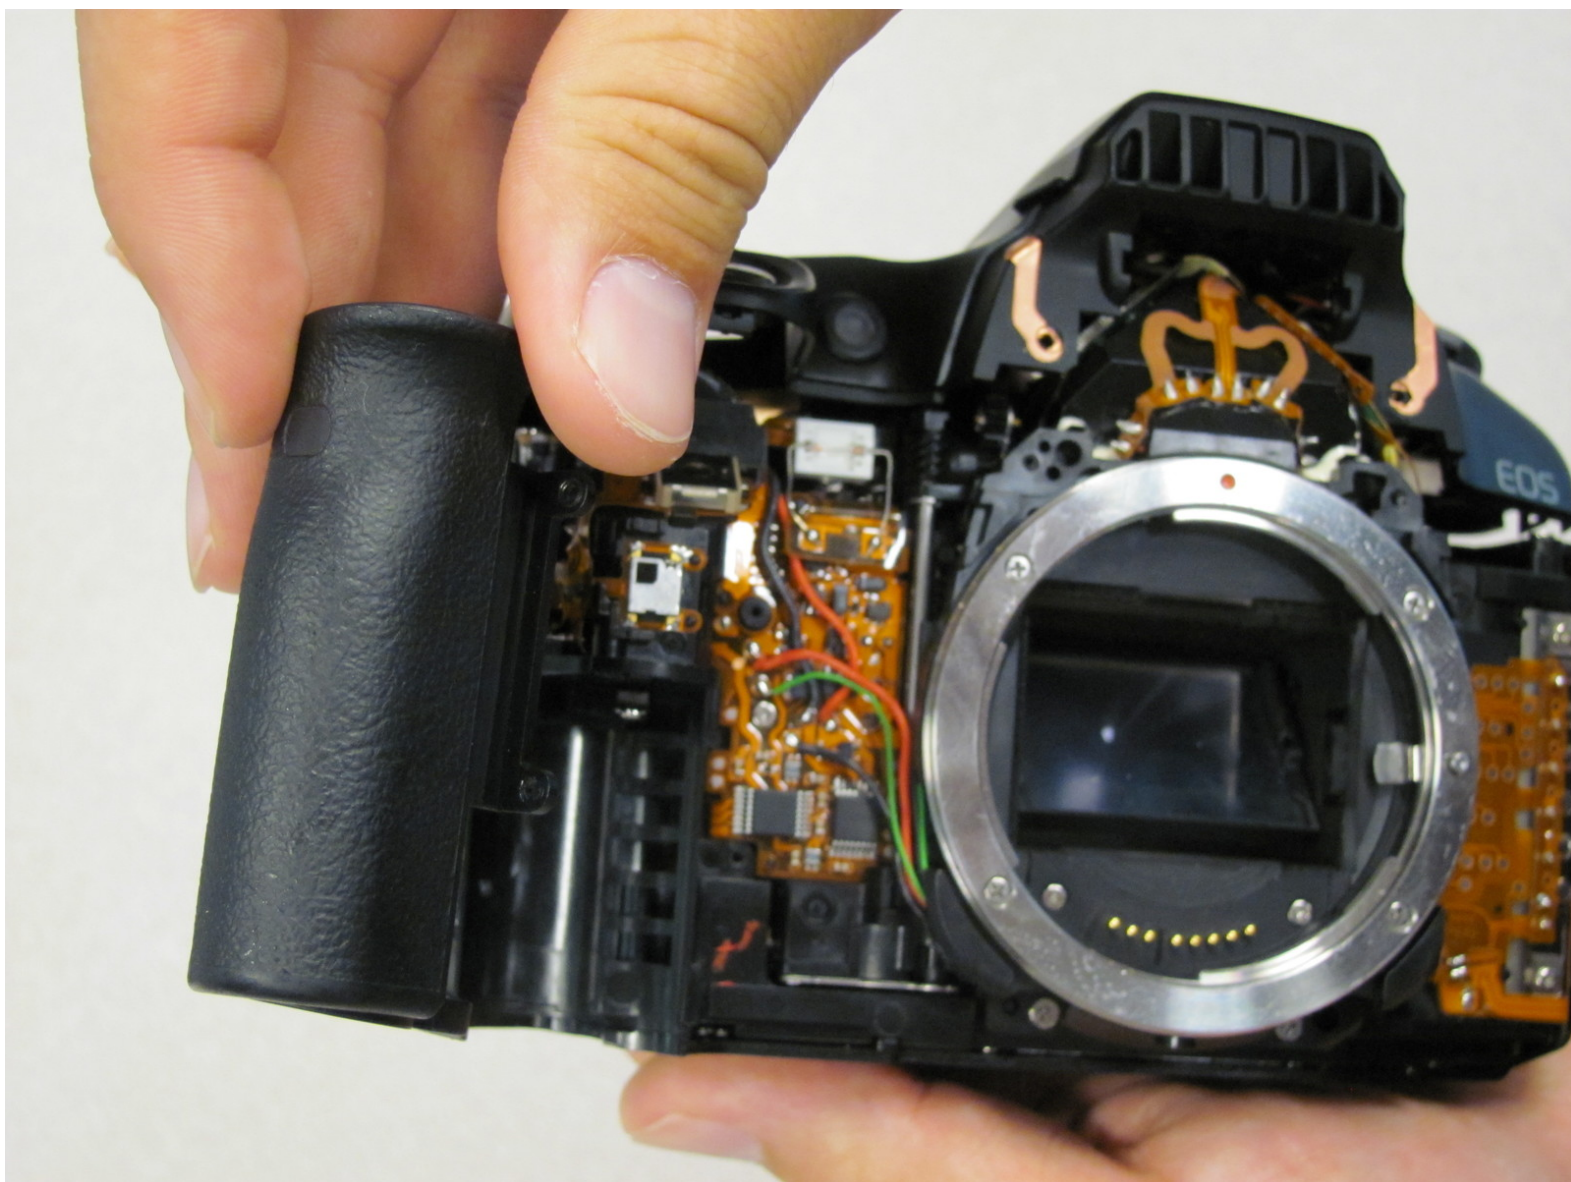

## INTRODUCTION

Removing the grip is necessary to reach the battery door. This process is safe and easy.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Front Panel



- Remove two 4.8 mm black screws on the front of the camera.

## Step 2



- Remove one 4.3 mm black screw under the lens ring and one 4.8 mm black screw on the bottom of the camera.



### Step 3



- Remove one 4.8 mm black screw on the left side.

### Step 4



- Remove the front panel by lifting out the side opposite the grip.

## Step 5 — Top Panel



- Slide the outer eyepiece upward to remove it.

## Step 6



- Remove two 4.75 mm Phillips #00 screws from top of camera.



## Step 7




- Remove four 4.3 mm Phillips #00 screws from back of camera.

## Step 8



- Slowly separate top panel from camera by pushing up.
- ⚠ Be careful, as top panel is still attached by wiring and ribbon cable to the camera.

## Step 9

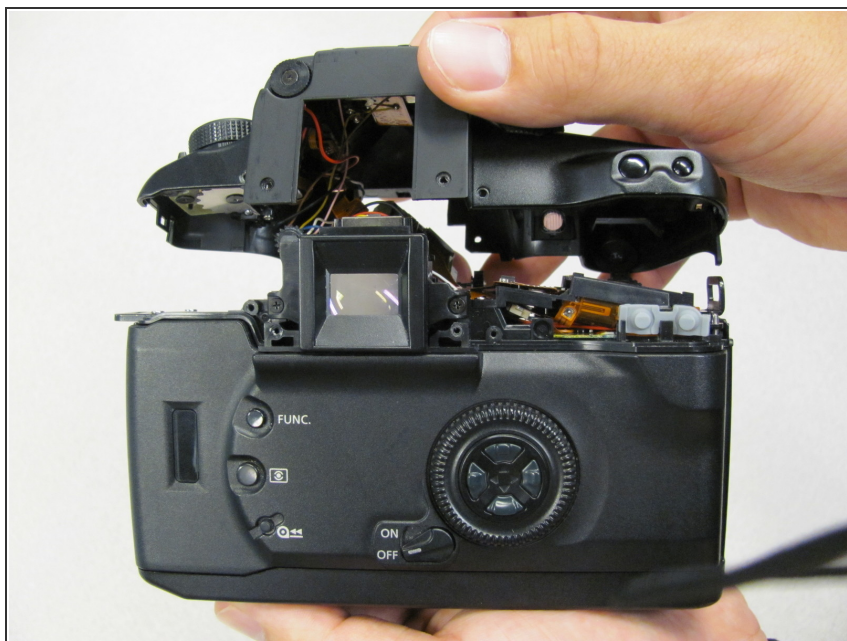

⚠ Separating the top panel too far can damage the connecting wiring.

## Step 10 — Side Panel With Remote Control Socket



- Remove two 6.5 mm black screws from the panel.



## Step 11



- Remove plastic Remote Control Socket cap by pulling it straight out.


## Step 12



- Slide panel toward bottom of camera to remove.




## Step 13 — Grip

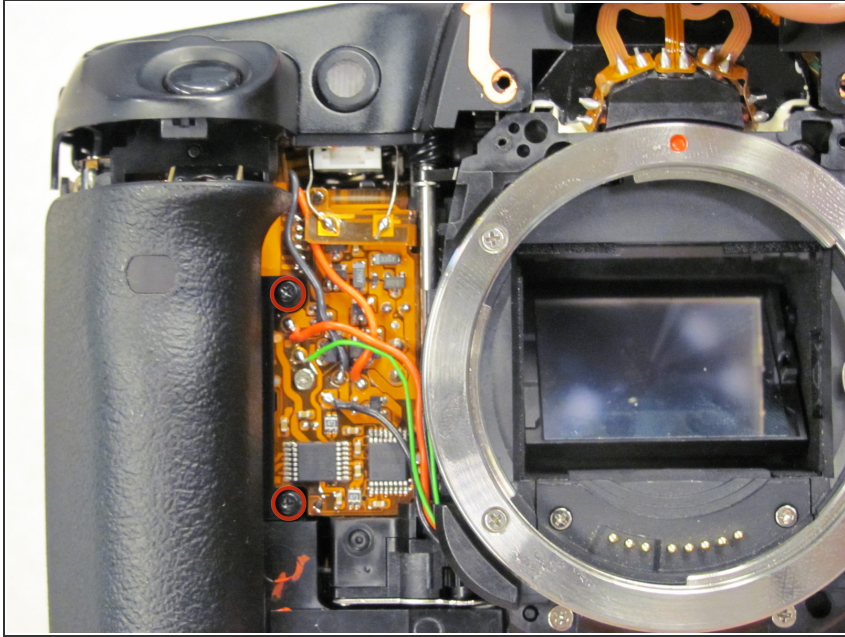

- Remove two 5.5 mm screws from front of camera.

## Step 14

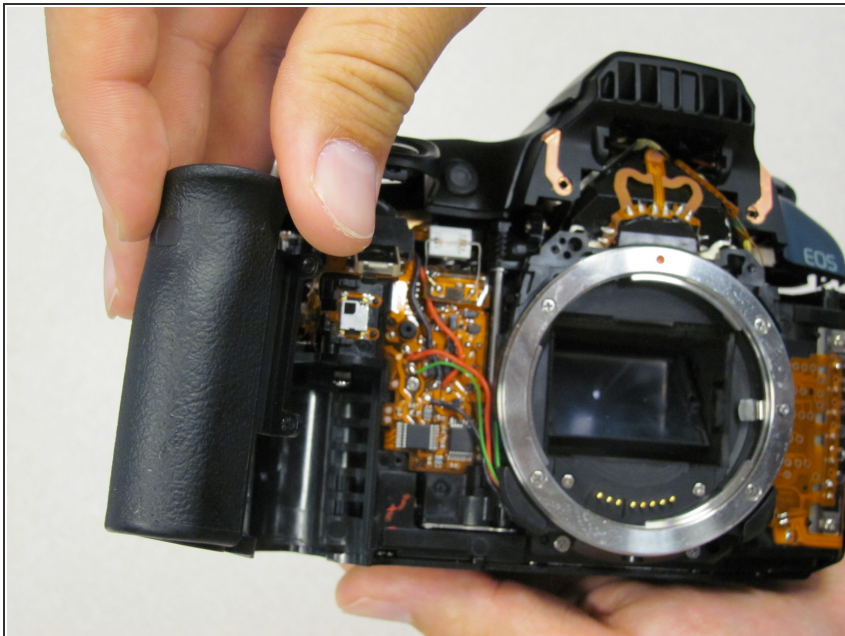

- Remove grip panel.

To reassemble your device, follow these instructions in reverse order.